

GB

## PROGRAMME CHART


### A. “Door open” indication

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately, e.g.:

### B. “Service” indication

### C. “Water tap closed” indication

### D. “Clean pump” indication

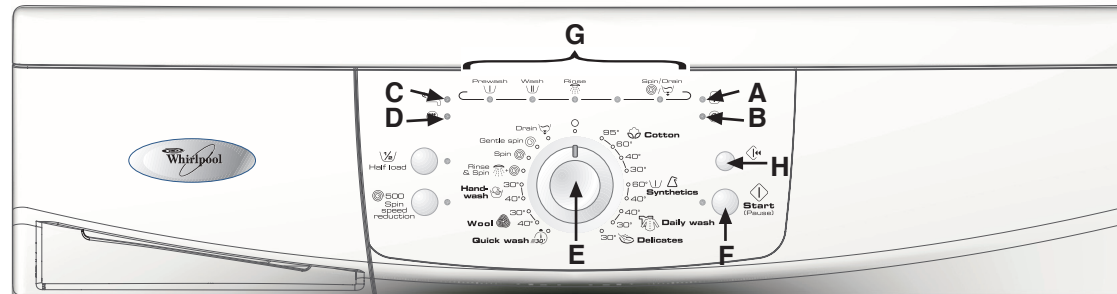

### E. Programme selector

### F. “Start/Pause” button

### G. Programme sequence indicator

### H. “Reset” button

Programme		Care Labels	Max. Load kg	Type of wash / Notes <i>- Respect the manufacturer's recommendations on the care label</i>	Detergents and Additives			Special options		Max. Spin Speed rpm
					Pre-wash	Main Wash	Softener	Half load	Spin speed reduction	
<b>Cotton</b> 95 °C	95 °C		5.0	Heavily soiled, long wearing and temperature stable textiles in cotton and linen (bed linen, table linen and underwear, shirts etc.).	–	Yes	*	*	*	Max.
<b>Cotton</b> 30 - 40 - 60 °C	30 - 40 - 60 °C	  	5.0	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	–	Yes	*	*	*	Max.
<b>Synthetics with prewash</b> 60 °C	60 °C		2.5	Heavily soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	Yes	Yes <sup>1)</sup>	*	*	*	1000 <sup>2)</sup>
<b>Synthetics</b> 40 °C	40 °C	  	2.5	Normally soiled blouses, shirts, overalls etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	–	Yes	*	*	*	1000 <sup>2)</sup>
<b>Daily wash</b> 30 - 40 °C	30 - 40 °C	 	3.0	Slightly to normally soiled textiles made of cotton and/or synthetics.	–	Yes	*	–	*	Max.
<b>Delicates</b> 30 °C	30 °C	 	1.5	Curtains and delicate clothing, dresses, skirts, shirts and blouses.	–	Yes	*	–	*	1000 <sup>2)</sup>
<b>Quick wash</b> 30 °C	30 °C		3.0	Shortly worn outer clothing made of cotton, polyester, polyamide and blends with cotton.	–	Yes	*	–	*	Max.
<b>Wool</b> 30 - 40 °C	30 - 40 °C		1.0	Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	–	Yes	*	–	*	1000 <sup>2)</sup>
<b>Handwash</b> 30 - 40 °C	30 - 40 °C		1.0	Textiles made of linen, silk, wool and viscose marked as “handwashable”.	–	Yes	*	–	*	400 <sup>2)</sup>
<b>Rinse &amp; Spin</b>		–	5.0	Same as the last rinse and the final spin in the “Cotton” programme.	–	–	*	–	*	Max.
<b>Spin</b>		–	5.0	In this programme spinning is intensive. Same as the spin cycle in the “Cotton” programme.	–	–	–	–	*	Max.
<b>Gentle Spin</b>		–	1.0	In this programme spinning is gentle. Same as the spin cycle in the “Wool” programme.	–	–	–	–	*	1000 <sup>2)</sup>
<b>Drain</b>		–	–	Water is drained only - no spinning.	–	–	–	–	–	–

\* : option / Yes : dosing required

<sup>1)</sup> Do not use liquid detergent for main wash when activating the prewash

<sup>2)</sup> For improved garment care spin speed is restricted in these programmes.

Whirlpool is a registered trademark of Whirlpool USA.

**5019 301 01162**

## CONSUMPTION DATA

Programme	Temperature Selector (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx. Programme Duration (hours : minutes)
Cotton	95	5.0	49 *	1.90	2:00
Cotton **	60	5.0	44	0.95	2:20
Cotton	40	5.0	44	0.60	2:00
Synthetics	40	2.5	45	0.55	1:15
Daily wash	40	3.0	45	0.45	1:00
Delicates	30	1.5	50	0.50	0:45
Quick wash	30	3.0	40	0.40	0:30
Wool	40	1.0	55	0.60	0:45
Handwash	40	1.0	45	0.60	0:40
Handwash	30	1.0	45	0.50	0:36

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456.

Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash.

\* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

\*\* Reference Programme for Energy Label.

## ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergents as indicated on the front page and as described in your Instructions for Use. Close the door and turn the programme selector to the desired programme and temperature. The indication lamp next to the **“Start/Pause”** button blinks.

## SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lamp lights up. When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

### “Half load” button

- Reduces water consumption, above all during the rinsing.
- Suitable for lightly soiled laundry and small loads (max. 3 kg).

### “Spin speed reduction” button

- Reduces the predetermined automatic maximum spin speed to treat your laundry more gently.

## PROGRAMME START

Open the tap and press the **“Start/Pause”** button. The indication lamp next to the **“Start/Pause”** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain. When the programme phrase is finished, the corresponding indication goes out.

## “DOOR OPEN” INDICATION

Before starting and after end of a programme, the lamp lights to show the the door can be opened. As long as a wash programme is running, the door remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to “Cancel (Reset) a running programme before the end”.

## RED INDICATIONS

### “Service”

Lighting up of the “Service” indication can be caused by a fault in an electrical component. Refer to the “Troubleshooting Guide” in your “Instructions for Use”; if the fault persists, contact our After Sales Service.

### “Water tap closed”

The appliance has no or insufficient water supply. Open the water tap: if the indications still lights up, refer to the “Troubleshooting Guide” in the Instructions for Use.

### “Clean pump”

Waste water is not pumped out. Check whether the drain hose is kinked or the filter must be cleaned: in the latter case refer to the Instructions for Use (“Removing the Filter”).

## PROGRAMME END

- All the lights of the programme sequence indicator are off, and the “Door open” indication lights up.
1. Turn the programme selector to the “Off/O” position.
  2. Close the water tap.
  3. Open the door and unload the machine.
  4. Leave the door ajar to allow the drum to dry.

## CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **“Start/Pause”** button to pause the programme. The light blinks.
2. Select the new programme (with temperature), any options and another spin speed if you want.
3. Press the **“Start/Pause”** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

## CANCEL (RESET) A RUNNING PROGRAMME BEFORE THE END

The **“Reset”** button cancels a programme before the end.

- Press the **“Reset”** button for at least 3 seconds.
- Any existing water is drained out before the door can be opened.